



VIDEO ARCHIVING OPTIONS







Ness Ultimate Series

This tech note applies to Ness Ultimate 4ch, 8ch & 16ch DVRs.

Method 1

EzBurn™

EzBurn is the simplest and fastest way to archive video. Minimal button presses. Perfect for once off saving.

- 1  Insert a fresh USB Stick or DVD/RW (DVD must be RW Re-Writable)
 **WARNING.** Do not use your personal USB stick - all existing data will be erased. EzBurn will automatically format the media. Use a blank USB stick or DVD.
- 2  Use the Play/Stop button to display the footage you want to archive.
- 3  Press the CALL button at the start of the footage you want to save. (Sets the start point of the archive).
- 4  Press the CALL button at the end of the footage you want to save. (Sets the end point of the archive).
 The DVR will now calculate and display the file size.
- 5  Press the ENTER button to save the file to your USB device or DVD.















NOTES

- EzBurn automatically saves the DRV Player to your media. You don't need any third party media player to view the file.
- EzBurn saves the footage in proprietary DRV File Format.
- EzBurn automatically creates an AutoRun File when saving to DVD. The DVD will Autorun when inserted in a PC.

Method 2

Video Export Menu

Video Export via menu is designed for multiple burns of various Cameras and various times. Also gives you the choice to save video in AVI or DRV formats.

- 1 Take note of the camera numbers and time/date of the incident you want to archive.
- 2  Press the MENU button.
- 3 Use the camera select buttons to enter the password. *The default user password is 4321.*
- 4   Use the arrow buttons to select **Video Export**, then press ENTER.
- 5   Select your **Device** - USB or DVD.
- 6  Select **Start Time** and **Finish Time**.
- 7   Select or de-select **Cameras** you wish to archive, (all cameras are selected by default).
- 8  Select **AVI** or **DRV** file format.
- 9  Select **Digital Signature** Yes or No. (Digital Signature saves extra files containing watermark and encryption data).
- 10  Insert a fresh USB Stick or DVD/RW (DVD must be RW Re-Writable)
 **WARNING.** Do not use your personal USB stick - all existing data will be erased. The media will be automatically formatted. Use a blank USB stick or DVD.
- 11   Select **Begin Export** then press ENTER.

NOTES

- AVI File Format is a common video format which can be viewed on most computers using a media player. However, AVI format saves each camera as a separate file which must be played individually.
- DRV Format allows multiple movies to be saved and also automatically saves the DRV Player software. DRV format allows all cameras to be viewed simultaneously on playback using the supplied Player software.
- Both AVI and DRV formats export audio channels with the video.

SYDNEY 02 8825 9222
sales@ness.com.au

MELBOURNE 03 9875 6400
nessmelb@ness.com.au

BRISBANE 07 3399 4910
nessbris@ness.com.au

PERTH 08 9328 2511
nessper@ness.com.au

ADELAIDE 08 8152 0000
adelaide@ness.com.au



CCTV Products

www.ness.com.au